A. Battery Inventory

- 1. Each LIFEPAK® 12 will be supplied with five Ni-Cad batteries.
- 2. Each LIFEPAK® 15 will be supplied with four Lithium-Ion batteries.

B. Battery Status Indicators

LIFEPAK® <u>15</u>

- a) **Active Battery**: Battery status indicators display up to four green bars. Each green bar represents 25 % remaining charge.
- b) Low Battery: A yellow bar indicates a 5% to 10% remaining charge .
- c) Very Low Battery: One Red flashing bar indicates 0 to 5% remaining charge. If both batteries show red bars, the REPLACE BATTERY voice prompt occurs.
- d) **Unrecognized Battery**: Battery communication failed. May power up the defibrillator but the level of charge is unknown and low battery messages and prompts will not occur.
- e) **No battery installed** *or* **fault detected**: When battery well shows grey no battery was installed or a fault was detected and the device will not use the battery.

C. Battery Maintenance

LIFEPAK® 12

- 1. Rotate all batteries in active use so that they are used with equal frequency.
- 2. Condition batteries every three months.
- 3. Perform shelf life tests every six months.

LIFEPAK® 15

- 1. Lithium –ion batteries are low maintenance and require no scheduled cycling to prolong battery life.
- 2. When storing the LIFEPAK® 15 monitor/defibrillator for an extended period of time, the battery should be removed from the device.

D. Battery Storage

- 1. Do NOT store batteries on a metal shelf.
- Keep batteries and charging unit in a cool, well ventilated area at temperatures between 68° to 77° F.

NOTE: Batteries will self-discharge during storage

E. Battery Replacement

Replace LIFEPAK® Batteries if:

- 1. The LIFEPAK® 12 Ni-Cad battery is over two years old or the LIFEPAK® 15 Lithium–ion battery is over three years old.
 - a) This may be determined by looking at the 4-digit number imprinted on the back of each battery. The first two numbers represents the year and the 2nd two numbers represent the week. For example, "1110" is a battery that is from 2011 during the 10th week.
- 2. There is physical damage to the battery case i.e. cracks or a broken clip.
- 3. The battery is leaking.
- 4. If the charger displays "DISCARD".
- 5. If no lights are seen after a full charge on the NiCad battery.
- 6. The battery charger indicates **Discard** (LP12) or **fault (**LP15).
- 7. The battery fuel gauge indicates two or fewer LEDs (bars) after the battery completes a charge cycle.
- 8. The battery fuel gauge shows two **<u>flashing</u>** LED lights
- NOTE: Replacement batteries can be obtained by contacting EMS R&D and submitting an EMS service request.